

Affordable Reliable Service

Factory 11 no 17-23 Keppel Drive Hallam 3803, Victoria Ph. +61 3 9799 1999 Fax. +61 3 8786 3005 warehouse@aggdoors.com.au

Coding Transmitters For SGO-1v3 Elite

DCB-05 can store up to five hundred and eleven (511) transmitters in its memory. Each transmitter can be allocated an alpha-numeric ID label up to eleven (11) characters in length. Each button can be assigned to one of several control functions.

The settings for a transmitter are represented in **Fig. 28.** It shows the transmitter's store number, ID label or serial number and the functions assigned to each of its four buttons.

To toggle between ID/SN display, press UP/DOWN with the cursor on the ID/SN indicator.

BRAND OF TRANSMITTERS

First memory location sets the type of transmitters which can be stored into the memory of the receiver. It either can be ATA $TrioCode^{TM}$ or B&D $Tri-Tran^{TM}$ transmitters.

Coding Transmitter Buttons

Step 1. Navigating to "code transmitter" menu

- 1. Press NEXT to navigate to the Menu 1 (Fig. 29).
- 2. Press SET to enter code set procedure.

Step 2. Storing transmitter code

- DCB-05 will prompt to press one of the transmitter's buttons.
- 2. Press the transmitter button you wish to use to operate the Gate Opener (e.g. button 1) (Fig. 30).
- Press same transmitter button again as prompted by display (Fig. 31).

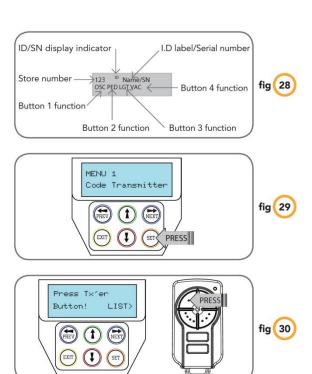


fig (31)

Step 3. Selecting function of the button

DCB-05 will now show the transmitter's record, with a cursor on the field for the button being coded (Fig. 32). Use UP/DOWN to select the function for the button.

Available functions:

VAC (Vacation Mode)
STP (Stop)
CLS (Close)

LGT (Courtesy Light)
OPN (Open)
SWP (Swipe)

PED (Pedestrian access) OSC (Open/Stop/Close)

OFF (No action)

Press SET to save the settings (**Fig. 33**) or EXIT to abort without saving. Press EXIT to return to the MAIN SCREEN and test the transmitter.

