



Affordable Reliable Service

Factory 11 no 17-23 Keppel Drive Hallam 3803, Victoria

Ph. +61 3 9799 1999

Fax. +61 3 8786 3005

warehouse@aggdoors.com.au

Coding TXA-1 Compatible Transmitters

All ATA & FIRMADOOR TXA-1 (27MHz) remote controls are now obsolete - If you require a new remote, a compatible replacement can be supplied.

TXA-1 Remote Controls (27MHz)



AGG Doors Compatible Remote Controls (27MHz)



Purchasing compatible remotes – See below for instructions.

- **METHOD 1** (Programmed from EXISTING remote(s) - These remotes are programmed using the same SWITCH combination of your existing remote(s) but in REVERSE order (MIRRORED).

(Old) TXA-1



(New) Compatible



- **METHOD 2** (Programmed with a RANDOM switch combination) – These remotes are programmed using a random SWITCH combination that can then be SET (coded in) using the procedure below.

***NOTE – This option is for customers who have lost or no longer have existing remotes**

GDO-2&4 Control Panel



GDO-2&4 / Receiver Board

1. Press and Hold the Blue 'CODE SET' Button / 'SW1' Button.
2. Press the Transmitter Button for approximately two (2) seconds.
3. Pause for two (2) seconds.
4. Then Press the Transmitter Button again for approximately two (2) seconds.
5. Release the 'CODE SET' / 'SW1' Button.
6. Test the Transmitter for operation.

NOTE 1: The Transmitter's code can be deleted from the receiver's memory by repeating the above procedure.

NOTE 2: To delete all Transmitter codes in the receiver's memory, turn the power off, then hold the 'CODE SET' Button down and turn the power back on – Release the 'CODE SET' Button after approximately five (5) seconds.

Receiver Board

