

Affordable Reliable Service

ABN 27 106 103 315 www.aggdoors.com.au enquiries@aggdoors.com.au (03) 8789 1342



Genuine Mitto 4M

Programming of your new Remote control

Receiver with Digital screen


- 1. Press the "OK" button on your receiver twice. The screen displays "PARA".
- 2. Press the "-" button on your receiver twice. The screen displays "RADIO".
- 3. Press the "OK" button on your receiver once. The screen displays "ADJ STRT".

	0 - +
8888	0
0000	

- 4. Press the "OK" button on your receiver once. The screen displays "Hide Button".
- 5. Press both buttons on your new remote control at the same time. Keep them pressed down. The screen displays "Released".
- 6. Let the buttons go. The screen displays "Desired Button".
- 7. Press a button on your new remote control. The screen displays "OK".
- 8. Wait 10 seconds.
- 9. Your new remote control is programmed.

Programming of your new Remote control

Receiver without Digital screen

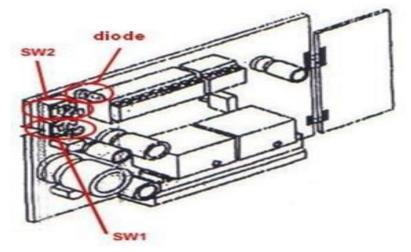

- 1. Open the casing of your receiver. It is located next to your motor.
- 2. On the receiver circuit board, press the programming button (SW1). The LED light of the receiver blinks. Let the button go.
- 3. Press both buttons on your new remote control at the same time. Let them go. The LED light of the receiver remains lit fixedly.
- 4. Press the left button on your new remote control. Let it go. The LED light of the receiver blinks.
- 5. Wait 5 seconds. The LED light of the receiver turns off.
- 6. Repeat this procedure for the right button of your new remote control. This time, use the programming button SW2.
- 7. Wait 10 seconds.
- 8. Your new remote control is programmed.

Coding via existing coded remote

Locate a remote already coded to & working the device. Be within 3 meters of the gate control box.

Original Remote: Press hidden button on back of remote with a pin or paper clip OR press Button 1 & 2 together until remote LED lights.

Original Remote: Momentarily press button that opens device.

This puts the device receiver into learning Mode

New Remote: Press hidden button on back of remote with a pin or paper-clip or press buttons 1 & 2 together until remote LED lights.

This teaches the receiver the additional code to remember.

