



Affordable Reliable Service

ABN 27 106 103 315

www.aggdoors.com.au

enquiries@aggdoors.com.au

(03) 8789 1342



Genuine XT2

Coding your Remote into the Opener

1. Push and release the learn button found on the receiver board. A red light should illuminate.
2. Push and hold your desired button on the remote control for 2-3 seconds or until the light on the receiver flickers.
3. Wait 20 seconds before testing your remote to make sure it has been coded successfully.

