

Affordable Reliable Service

ABN 27 106 103 315

www.aggdoors.com.au enquiries@aggdoors.com.au (03) 8789 1342



Genuine XT4

Coding Your Remote into the Opener

- 1. Push and release the learn button found on the receiver board. A red light should illuminate.
- 2. Push and hold your desired button on the remote control for 2-3 seconds or until the light on the receiver flickers.
- 3. Wait 20 seconds before testing your remote to make sure it has been coded successfully.







