



**Affordable Reliable Service**

ABN 27 106 103 315

[www.aggdoors.com.au](http://www.aggdoors.com.au)

[enquiries@aggdoors.com.au](mailto:enquiries@aggdoors.com.au)

(03) 8789 1342



*Avanti WTX-4*

## Programming your Remote into the Motor

1. Open the white light cover on the Opener on the ceiling of your garage.
2. Quickly press and release the RED LEARN BUTTON – The LED light will flash slowly.
3. Select which button you wish to use on your remote and quickly press and release your SELECTED REMOTE BUTTON – The Led light will extinguish.
4. Quickly press and release your SELECTED REMOTE BUTTON AGAIN – The LED light will flash quickly.
5. On the next press of the remote the garage door will open.

**Note:** To code additional remotes, repeat steps 1-5

## Clearing the Codes from your Motor

1. Open the white light cover on the Opener on the ceiling of your garage.
2. Quickly press and release the RED LEARN BUTTON – The LED light will flash slowly.
3. Press and hold the BLACK RUN BUTTON – The LED light will flash quickly.
4. All remote codes will be deleted when the LED light stops flashing When codes have been deleted, refer to step 2 under Code Learning above to recode remotes.

