



**Affordable Reliable Service**

ABN 27 106 103 315

[www.aggdoors.com.au](http://www.aggdoors.com.au)

[enquiries@aggdoors.com.au](mailto:enquiries@aggdoors.com.au)

(03) 8789 1342



*Genuine TML4*

### Remote-to-remote programming:

1. Place an already-programmed remote control next to the new remote control so they touch as shown in fig 1.
2. Press a button on your already-programmed remote control.
3. While keeping the button on your already-programmed pressed down, press the same button on your new remote control. Keep them pressed down.
4. The LED light on your new remote-control blinks twice.
5. Let the buttons go.
6. Wait 10 seconds.
7. Your new remote control is programmed.

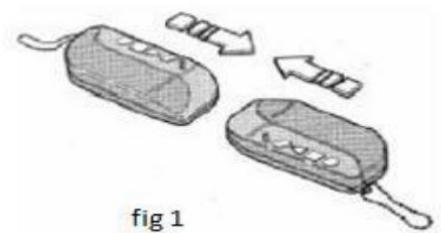


fig 1

## Receiver-based programming:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (SW1). Keep it pressed down.
3. While keeping the button SW1 pressed down, press a button on your new remote control.
4. Let the buttons go.
5. Wait 10 seconds.
6. Your new remote control is programmed.

### Note:

- During the coding process, if you press one of the buttons on the new remote control first, you run the risk of erasing the codes of all of the remote controls that have already been programmed.
- The coding process will incite the opening of your garage door. To avoid an accident, we recommend that you program your remote control while inside your garage.

