



**Affordable Reliable Service**

ABN 27 106 103 315

[www.aggdoors.com.au](http://www.aggdoors.com.au)

[enquiries@aggdoors.com.au](mailto:enquiries@aggdoors.com.au)

(03) 8789 1342



*Genuine TM2*

## Transmitter Coding

1. Press and hold the button of the **working** transmitter.
2. Keep holding the **working** transmitter button. Get the **new** transmitter and position it on by head to head or LED to LED with the **working** transmitter.
3. While still holding the **working** transmitter button, press and hold the same button on the **new** transmitter as well.
4. The LED on the **new** transmitter should flash twice and stay on.
5. Release the button of the **new** transmitter before releasing the **working** transmitter.
6. Press the button on the **new** transmitter and it should log on to the decoder. Gate or garage should start to work.

