




Affordable Reliable Service

ABN 27 106 103 315

www.aggdoors.com.au

enquiries@aggdoors.com.au

(03) 8789 1342

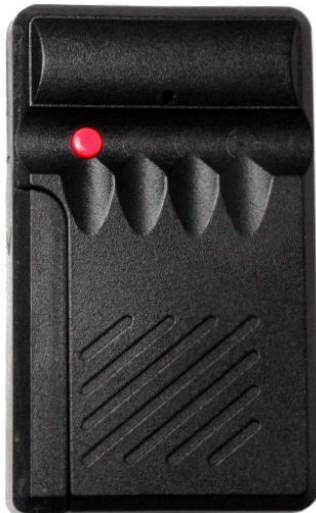

Genuine SE40TX

Remote-to-remote programming:

1. Open the casing of your already-programmed remote.
2. You will see a row of small programmable numbered switches. They are in the ON or OFF position.
3. Open the casing of your new remote.
4. You will see a row of small programmable numbered switches.
5. Set them in the same way as those set in your already-programmed remote.
6. Your new remote control is programmed.

Receiver-based programming:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of small programmable switches. They are in the ON or OFF position.
3. Open the casing of your new remote.
4. You will see a row of small programmable numbered switches.
5. Set them in the same way as those set in the receiver.
6. Your new remote control is programmed.

