



Genuine E940M

Coding in Your Remote

1. Press and hold the desired button on your remote control. The LED indication on the opener should flash continuously.
2. Press and release the Learn button located on the opener
3. The opener light will flash or click twice when it has learnt the new code
4. Test the remote

Deleting Your Remote Codes

1. Press and hold the learn button for 6 seconds or until the LED goes out.
2. Test your remote to make sure the codes have been deleted

